# AIR-WL



## Wall mounting bracket

The AIR-WL is a wall mounting bracket for AIR-C6 and AIR-C8 with pan and tilt functionality.


Tilt adjustments are simply achieved using a selflocking mechanism holding the speaker in place, even with all the bolts fully released.

The AIR-WL mount fits all loudspeakers that are foreseen from universal mounting patterns VESA 75 x 75, 75 x 88 mm, 75 x 63 mm (2,95" x 3,44", 2,95" x 2,46"). Its installation on the wall mount patterns is 65 x 100 mm (2,56" x 3,94").

The AIR-WL is the way to go in all immersive sound applications given its pan ability of -90° to 90° rotation and -5° to +30° vertical tilt.



#### **DIMENSIONS**

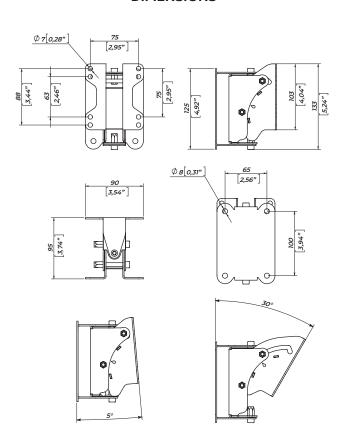

#### **SPECIFICATIONS**

| Functions                   | wall mounting bracket with pan and tilt                                  |
|-----------------------------|--|
| Universal mounting patterns | 75 x 88 mm / 2,95" x 3,44"<br>75 x 63 mm / 2,95" x 2,46"<br>VESA 75 x 75 |
| Wall mount patterns         | 65 x 100 mm / 2,56" x 3,94"  |
| Pan angle                   | -90° to 90°  |
| Tilt angle                  | -5° to +30°  |
| Dimensions (W x H x D)      | 90 x 133 x 95 mm /<br>3,54" x 5,24" x 3,74"                              |
| Weight (Net/Shipping)       | 0,73 kg / 1,61 lbs   |

### **SAFETY INSTRUCTIONS**

- 1. Entrust mounting equipment to the experienced professionals following current safety instructions. Improperly installed equipment can result in property damage, personal injury and/or liability to the installing contractor.
- 2. Always use safety cables to prevent equipment from falling during setup or while exploitation.
- 3. Carefully check the mounting surface of the wall. Make sure wall material can hold the weight of the speaker with the mounting added.
- 4. Make sure to securely fix all the mounting bolts. Loose bolts may become unscrewed with time due to vibration and create safety hazard.

